

Hob Instructions:



Controls

ⓘ	Main switch
🔑	Childproof lock
○	Hotplate selection
- +	Adjustment fields

Residual Heat Indicator

The hob has a two-stage residual heat indicator for each hotplate. If 'H' appears in the display the hob is still hot. The display remains lit until the hotplate has cooled sufficiently.

Displays:

1-9 Heat Settings – H Residual Heat

Be Aware:

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry.
- Do not pull pans close to the displays and sensors. The electronics could overheat.

Switching On the Hob

Touch the main switch, an audible signal will sound. The indicator light above the main switch and the 0 displays light up. The hob is ready for use.

Switching Off the Hob

Touch the main switch, until the display light above the main switch and the displays go out. All hotplates are switched off, the residual heat indicator remains on until the hotplates have cooled down sufficiently.

Setting the Hob

- Touch the O symbol to select the hotplate.
- Use the + and – symbols to set the desired heat setting.
- Heat setting 1 = lowest setting, Heat Setting 9 = highest setting.
- Touch the O symbol to select the hotplate, then – symbol until 0 appears – this switches off the hotplate.
-

Childlock

- The hob must be switched off to activate child lock
- Touch the childproof lock button for approx. 4 seconds. The display light above the child lock symbol lights up for 10 seconds. THE HOB IS LOCKED
- Touch the childproof lock button for approx. 4 seconds. THE HOB IS UNLOCKED

Oven Instructions:

Control panel layout



- A) Oven/Grill function knob
- B) Main Oven temperature control knob
- C) Oven./grill temperature indicator



Light



Defrosting



Circular Heating Fan



Grill & Fan



Grill

How to Operate:

- Select the Oven/Grill function on the knob
- Set the thermostat on the temperature Oven/Grill knob
- Close the Oven door and wait approx. 20 minutes for the oven to reach its set temperature.
- To turn off – turn function knob and thermostat knob to off position (top).

Childlock

- Activate child lock by touching Set + for 5 seconds. From this moment on all other functions are locked and the display will flash STOP.
- To Deactivate child lock touch the Set + for 5 seconds.

EXTRACTOR FAN

Switching On – set the slide control to position 1.

Setting the Fan – Set the slide control to position 1, 2 or 3

Switching Off – set the slide control to position 0.