

Fire Alarm

What to do if the fire alarm sounds:

- Alert small children in the accommodation
- Leave immediately by your escape plan.
- Stay close to the floor if the air is smoky. Breathe shallowly through a cloth, wet if possible.
- Once outside, go to your selected meeting place and make sure everyone is there.
- Call the Fire Brigade by dialling 999.
- Call the emergency park number.
- Don't return to your accommodation until a fire official has said it is ok to do so.

Carbon Monoxide Alarm

Feature	What this means	Required Action
Green LED flashes every 30 seconds	Normal Operation	None
The alarm chirps every 60 seconds and the red LED flashes	Low Batteries	Inform reception and batteries will be changed immediately
Alarm chirps twice every 30 seconds and the red LED flashes twice	End of life of the Alarm	Inform reception and the alarm will be changed immediately.
Alarm chirps every 30 seconds and the red LED flashes every 30 seconds	Malfunction	Inform reception and the alarm will be changed immediately.
Red LED on and constant tone	Malfunction	Inform reception and the alarm will be changed immediately.
Loud continuous alarm with the red LED	High levels of CO have been detected.	Vacate the accommodation and ring the emergency number immediately.



Fire Alarm
Carbon Monoxide Alarm Manual
Barnsoul
